



INSTALLATION MANUAL Rev.0, 22/02/2024

SOLAR PANEL EOOD

BG 207029348 Preslav street, 2
7700 Targovishte - Bulgaria



Don't step, stand or sit on modules while installing or cleaning.

IMPORTANT SAFETY INSTRUCTIONS

This manual contains important safety instructions for the Solar Photovoltaic Modules (hereafter referred to as "Modules") of Solar Panel EOOD (hereafter referred to as "SP"). Installers should follow all safety precautions described in this guide as well as local codes when installing a Module.

Installing solar photovoltaic systems requires specialized skills and knowledge. Installation should only be performed by qualified personnel.

Before installing a solar photovoltaic system, installers should familiarize themselves with its mechanical and electrical requirements. Keep this guide in a safe place for future reference and in case of sale or disposal of the Modules.

For any questions, please contact our Quality and Customer Service department for further information.

CONTENTS

1	Introduction		6	Electrical Installation	-----	13
2	Codes and Regulations			1 Electrical Property	-----	13
3	General			2 Cables and Wiring		15
	1 Product identification			3 Connectors	-----	15
	2 Conventional Safety	-----		4 Bypass Diodes		15
	3 Electrical Performance Safety		7	Grounding	-----	17
	4 Operating Safety			1 Grounding by using grounding bolt	-----	17
	5 Fire Safety	-----		2 Grounding by using unused mounting hole	-----	17
4	Installation Condition			3 Additional Third-party Grounding Devices		17
	1 Installation position and working environment	---	8	Operation and Maintenance		18
	2 Tilt Angle Selection	-----		1 Cleaning	-----	18
5	Mechanical Installation			2 The visual inspection of the Modules	-----	18
	1 Conventional requirements	-----		3 Inspection of the connector and the cable	-----	18
	2 Installation methods and static loads				-----	

1 INTRODUCTION

Thank you for choosing SP!

This installation Manual contains essential information for electrical and mechanical installation that you must know before handling, installing SP Modules. This Manual also contains safety information you need to be familiar with. All the information described in this Manual is the intellectual property of SP and is based on the technologies and experience that have been acquired and accumulated by SP.

This Manual does not constitute a warranty, expressed or implied. SP does not assume responsibility and expressly disclaims liability for loss, damage, or expense arising out of or in any way connected with installation, operation, use or maintenance of Modules. No responsibility is assumed by SP for any infringement of patents or other rights of third parties that may result from use of Modules. SP reserves the right to make changes to the product, specifications or installation manual without prior notice.



Failure to comply with the requirements listed in this manual will invalidate the Limited Warranty for Modules as provided by SP at the same time of sale to the direct customer. Additional recommendations are provided to enhance safety practices and performance results. Please provide a copy of this manual to the PV system owner for their reference, and inform them of all relevant aspects of safety, operation, and maintenance.

2 Codes and Regulations

The mechanical and electrical installation of PV systems should be performed in accordance with all applicable codes, including electrical codes, building codes and electric utility inter connection requirements. Such requirements may vary for mounting location. Requirements may also vary with system voltage, and for DC or AC application. Contact local authorities for governing regulations.



3 General

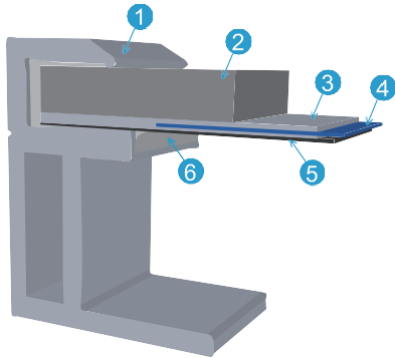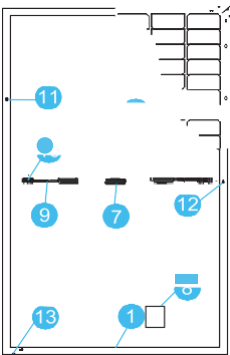

1.AluminumFrame	2.Glass	3.EncapsulatingEVA	4.Cell	5.Backsheet	6.Siliconeadhesive
7.JunctionBox	8.Label	9.Cable	10.Connector	11.Mountinghole	12.Groundinghole
13.Drainageholes	14.Cell				

1. Product Identification

Each module has three labels providing the following information:

- a. Nameplate: describes the product type; Peak power, Max. power current, Max. power voltage, open circuit voltage, short circuit current, all as measured under standard test conditions; Certifications mark, the maximum system voltage etc.
- b. Current Sorting: modules are sorted out according to their Max. power current, referred as a corresponding symbol "Current class X" attached, in which x takes the value H, M or L (H marks physically the highest current). To get optimal performance out of a string of Modules it is recommended to connect only Modules of the same "Current class X" class (for example only H Modules) in one given string. For the rest of modules with different current classes, the modules with adjacent current class can be installed in one given string.
- c. Serial number: each individual module has a unique serial number. The serial number has 14 digits.
 - 1st and the 2nd digits are the company name,
 - 3rd and 4th are the company location,
 - 5th and 6th are the production month
 - 7th and 8th are the production year the month
 - From 9th to 16th is the counter with unique number for every module produced

For example, SPBG05023 means the module was assembled and tested in the March of 2023. Each module has only one bar code. It is permanently attached to the interior of the module and is visible from the top front of the module.

This barcode is inserted prior to laminating. In addition, you can find the same barcode beside the nameplate.

2. Conventional Safety

SP Modules are designed to meet the requirements of IEC 61215 and IEC 61730, application class A. Modules rated for use in this application class may be used in system operating at greater than 50V DC or 240W, where general contact access is anticipated. Modules qualified for safety through IEC61730-1 and IEC61730-2 and within this application class are considered to meet the requirements for safety class II equipment.

When Modules are mounted on rooftops, the roof must have a fire-resistant covering suitable for this application. Rooftop PV systems should only be installed on rooftops capable of handling the additional weighted load of PV system components, including Modules, and have a complete analysis of the structure performed by a certified building specialist or engineer.

For your safety, do not attempt to work on a rooftop until safety precautions have been identified and taken, including without limitation: fall protection measures, ladders or stairways, and personal protective equipment.

For your safety, do not install or handle Modules under adverse conditions, including without limitation strong or gusty winds, and wet or frosted roof surfaces.

3. Electrical Performance Safety

Photovoltaic Modules can produce DC electricity when exposed to light and therefore can produce an electrical shock or burn. DC voltage of 30 Volts or higher is potentially lethal.

Modules produce voltage even when not connected to an electrical circuit or load. Please use insulated tools and electrically insulated gloves when working with Modules in sunlight.


Modules have no on/off switch. Modules can be rendered in operative only by removing them from sunlight, or by fully covering their front surface with cloth, cardboard, or other completely opaque material, or by working with Modules facedown on a smooth, flat surface.

In order to avoid arcs and electrical shock, please do not disconnect electrical connections under load. Faulty connections can also result in arcs and electrical shock. So please keep connectors dry and clean, and ensure that they are in proper working condition. Never insert metal objects into the connector, or modify them in any way in order to secure an electrical connection.

In order to avoid external matter such as sand or water vapour from entering and causing connection safety problems, once the

modules are taken out of the packing box and installed, the connectors between the modules need to be connected in time, and the connectors need to be kept dry and clean during the installation process. Before connecting the modules at both ends of the string to the combiner box or inverter, plug the connectors with dust plugs to avoid contamination of the connectors.

Please note that contamination from sand, dust and water can cause arcing, electric shock or difficulty in plugging the connectors, etc. We recommend adding connector dust plugs as a temporary protective measure in dusty, saline and polluted areas, and do not recommend long-term use (within 1 month).

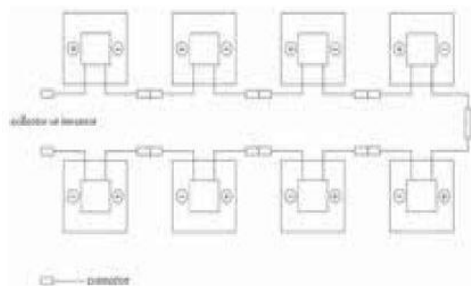

Reflection from snow or water can increase sunlight and therefore boost current and power. In addition, cold temperatures can substantially increase voltage and power.

If the glass or other material is damaged, please wear personal protection equipment and separate the module from the circuit.

Work only under dry conditions, and use only dry tools. Do not handle modules when they are wet unless wearing appropriate protective equipment. If you need to clean the modules, please follow the cleaning requirements mentioned in the manual.

Installation must be carried out under the guidance of a qualified electrician.

No matter how weather condition is, personnel entering the power station shall wear safety helmet, insulating gloves and insulating shoes correctly, taking self-safety protection measures.

4. Operating Safety

Do not open the package of SP Modules during transportation and storing until they are ready to be installed.

At the same time please protect the package against exposure to damage. Secure pallets from falling over.

Do not exceed the maximum height of pallets to be stacked, as indicated on the pallet packaging.

Store pallets in a ventilated, rain-proof and dry location until the Modules are ready to be unpacked.

Do not lift the Modules by grasping the Module's junction box or electrical leads in any condition.

Do not stand or step on the Modules.

Do not drop the Modules on another Module.

Do not place any heavy objects on the Modules to avoid glass breakage.

Be cautious when setting the Modules down on to a surface, especially on the corner of the Modules.

In appropriate transport and installation may break the Modules.

Do not attempt to disassemble the Modules, and do not remove any attached name plates or components from the Modules.

Do not apply paint or adhesive to the Module stop surface.

To avoid damage to the backsheet, do not scratch or hit the backsheet.

Do not drill holes in the frame. This may compromise the frame strength and cause corrosion of the frame.

Do not scratch the anodized coating of the frame (except for grounding connection). It may cause corrosion of the frame or compromise the frame strength.

Do not attempt to repair the Modules with damaged glass.

The scrapped modules shall be recovered and disposed by the qualified institution.

In dry areas, modules are easily affected by static electricity during installation. So, the installation personnel should wear anti-static assembly to ensure that the equipment and installation personnel are not affected or hurt by static electricity.

5. Fire Safety

Consult your local authority for guidelines and requirements for building or structural fire safety. SP modules have been in

accordance with IEC 61730-2 standard.

For roof installations modules should be mounted over a fire resistant covering suitable for this application, with adequate ventilation between the module backsheet and the mounting surface.

Roof construction and installation may affect the fire safety of the building. Improper installation may create hazards in the event of a fire.

Use appropriate components such as fuses, circuit breakers and grounding connectors as requires by local authority.

Do not use Modules where flammable gasses may be generates.

SP modules have not been tested for explosion protection. Please consult local regulations whether the modules can be used or not

3. Installation Conditions

1. Installation position and working environment

SP Modules are intended for use interrestrial applications only-no outer space use. Do not use mirrors or other magnifiers to concentrate sunlight onto the modules.

Modules must be mounted on appropriate mounting structures positioned on suitable buildings, the ground, or other structures suitable for modules (e.g., carports, building facades or PV trackers).

Modules must not be installed in locations where they could be submerged in water.

The recommended ambient temperature should be within -40°C (-40°F) to 40°C (104°F). A temperature range from a lower limit of environmental temperature of -40°C to the upper limit set by a 98th percentile module operating temperature of 70°C guidance on geographic areas, mounting conditions and system design and installation factors where the anticipated 98th percentile module operating temperature will be greater than 70°C ; (or 80°C or 90°C if tested to Level 1 or Level 2 conditions).

EXAMPLE:

Modules can be installed anywhere in the world if mounted with unrestricted airflow.

it is possible that modules installed with restricted airflow are not allowed for use in some hot locations, depending on system design parameters. Installers should assess if the system design at a specific geographic location will result in a 98th percentile module operating temperature greater than 70°C (80°C or 90°C if tested to Level 1 or Level 2 conditions), and must consider these factors in design of systems (refer to IEC TS 63126 for more information):

- site specific environmental conditions: irradiance, temperature, wind speed;
- system design: mounting distance, array size, array spacing, and anti-nesting features which could reduce airflow.

NOTE 1 Specific geographic restrictions can apply; maps in IEC TS 63126 provide examples.

NOTE 2 An IEC document describing a method for estimating the 98th percentile module operating temperature for different mounting and geographical combinations is in progress.

The temperature limits are defined as the monthly average high and low of the installation site. The limit operating temperature should be -40°C (-40°F) and 85°C (185°F).

Ensure modules are not subject to wind or snow loads exceeding the maximum permissible loads.

Make sure that the modules are not exposed to wind or snow loads that exceed the maximum permissible limits. Additionally ,the PV module is designed for maximum 2000 m altitude.

Lightning protection is recommended for PV systems that are to be installed in locations with high probability of lightning strikes.

Do not use modules near equipment or in locations where flammable gasses may be generated or collected.

Modules cannot be installed or used in extreme areas or weather conditions, and highly corrosive areas should be considered carefully.

Please adopt appropriate measures to ensure the performance and safety of the modules when they are installed or operated in areas heavy snow, extremely cold, strong wind, or near an island or desert that is prone to produce salt fog, or near water.

HSA Energy modules have passed the test sequence 1 of IEC 62716 and IEC 61701, test method 6, but galvanic corrosion can occur between the aluminum frame of the modules mounting or grounding hardware if such hardware is comprised of dissimilar metals. HSA Energy Modules can be installed at seaside locations 50m to 500m from the sea, but the components should be protected against corrosion

Modules cannot be applied for some special requirements, e.g. for marine and vehicle applications. Please refer to local law and regulations for details.

If the module is installed in the dusty environment, the ash layer on the module surface shall be cleaned regularly and immediately to prevent the ash layer from accumulating and forming hot spots on the surface and causing damage to module

2.Tilt Angle Selection

The tilt angle of the modules is measured between the surface of the modules and a horizontal ground surface. The modules generate maximum power output when it faces the sun directly

In the northern hemisphere, modules should typically face south, and in the southern hemisphere, modules should typically face north. For detailed information on the best installation angle, please refer to standard solar photovoltaic installation guides or consult a reputable solar installer or system integrator.

Dust building up on the surface of the modules can impair module performance. SP recommends installing the modules with a tilt angle of at least 10 degrees, making it easier for dust to be washed off by rain.

5. Mechanical installation

1. Conventional requirements

Ensure the installation method and supporting system of Modules is strong enough to with stand all the load conditions. The installer must provide this guarantee. The installation supporting system must be tested by the third-party organization with the analysis ability of Static Mechanical, according to the local national or international standards.

The Modules mounting structure must be made of durable, corrosion-resistant and UV-resistant material. Modules must be securely attached to the mounting structure.

In regions with heavy snowfall in winter, select the height of the mounting system, so that the lowest edge of the Modules is not covered by snow for any length of time. In addition, ensure that the lowest portion of the Modules is placed high enough so that it is not shaded by plants or trees or damaged by flying sand.

When the Modules are supported parallel to the surface of a building wall or roof, a minimum clearance of 10 cm between the Module frame and the surface of the wall or the roof is required to allow air to circulate behind the Modules and to prevent wiring damage.

Do not attempt to drill holes in the glass surface and the Modules frames of the Modules as this will void the warranty.

Before installing Modules on a roof, ensure that the roof construction is suitable. In addition, any roof penetration required to mount the Modules must be properly sealed to prevent leaks.

Observe the linear thermal expansion of the Modules frames, must ensure that the minimum distance between neighboring frames is 10mm.

The module frames will warp at low temperature.

Avoid the frame receiving the lateral tension and pressure, causing the frame off or crushing the glass.

Always keep the module backsheet free from foreign objects or structural elements, which could come into contact with the panel, especially when the panel is under mechanical load.

The Modules are certified to sustain a maximum static load of 1600 Pa (wind load) in the back and 1600 Pa or 3600 Pa (wind and snow load) in the front, (safety factor 1.5) depending on the Module type (for details, please see the installation methods below).

The mounting method must not result in the direct contact of dissimilar metals with the aluminum frame of the Module as it will result in galvanic corrosion. IEC 60950-1 standard recommends metal combinations not exceed an electrochemical potential difference of 0.6 Volts.

Modules can be mounted in landscape or portrait orientation.

2. Installation methods and static loads

Modules can be installed to the racks by clamps or hooks. Modules must be installed according to the following examples and recommendation. If not mounting the Modules according to these instructions, please in advance consult SP and must be approved by SP, otherwise may damage Modules and void the warranty.

1. Modules installed with mounting hole

Modules should be bolted to support structures through mounting holes located in the frame's back flanges. Refer to what is shown in Figure 2 (Mounting Details).

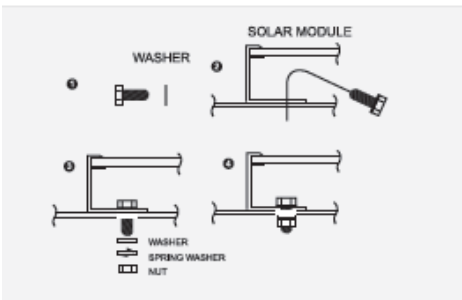


Figure2MountingDetails

For your reference, please use the components specified below:

1. Bolt	2. Washer
Material: Q235B/SUS304	Material: Q235B/SUS304
Size and Length: MB*16mm	Size: MB
3. Spring Washer	4. Nut
Material: Q235B/SUS304	Material: Q235B/SUS304
Size: MB	Size: MB
Recommended torque is between 12N.m to 16N.m.	

2 Modules installed with clamp

Modules should be mounted using specialized clamps as shown in Figure3.

A. Modules should be attached on a supporting structure rail by metal clamps. It is recommended to use the clamps under the following condition or approved by system installation:

Width: **Clamp A** no less than 50mm**Clamp B** no less than 38mm;


Thickness: No less than 3mm;


Material: Aluminum Alloy;

Bolt: M8;

B. The torque range of screw tightening is between 18N.m to 24N.m

C. The Modules clamps must not contact the front glass or deform the frame in any way, the contact area of the clamp with the front of the frame must be smooth, otherwise may damage the frame or break the modules. Avoid shading effects from the Modules clamps. Drain age holes on the Module frame must not be closed or obscured by the clamps.

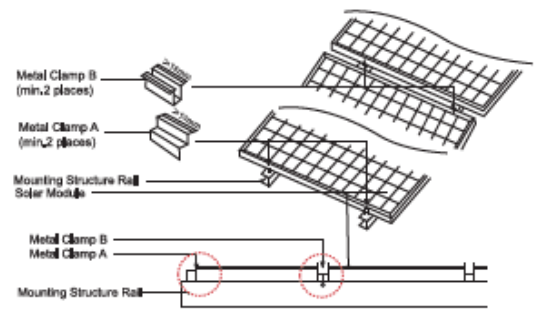

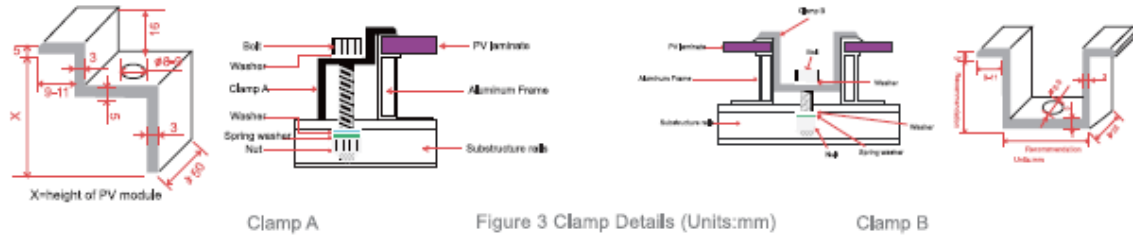


3.Installation position and corresponding static loads

The low/normal level of load condition is applicable to the installation in most of environmental conditions: the maximum static load on the back of the modules is 2400 Pa (i.e., wind load), and the maximum static load on the front of modules is 2400 Pa (i.e., wind and snow load).

The high level of load condition is applicable to the installation in harsher environmental conditions such as storm, heavy snow, etc: the maximum static load on the back of the modules is 2400 Pa (i.e., wind load), and the maximum static load on the front of modules is 5400 Pa (i.e. wind and snow load), depending on the pressure level that it would endure according to IEC standard.

For the dynamic loads, such as wind, the safety factor needs to be increased by 3 times.It means that the maximum dynamic load is 800 Pa when the wind speed is less than 130 km/h.



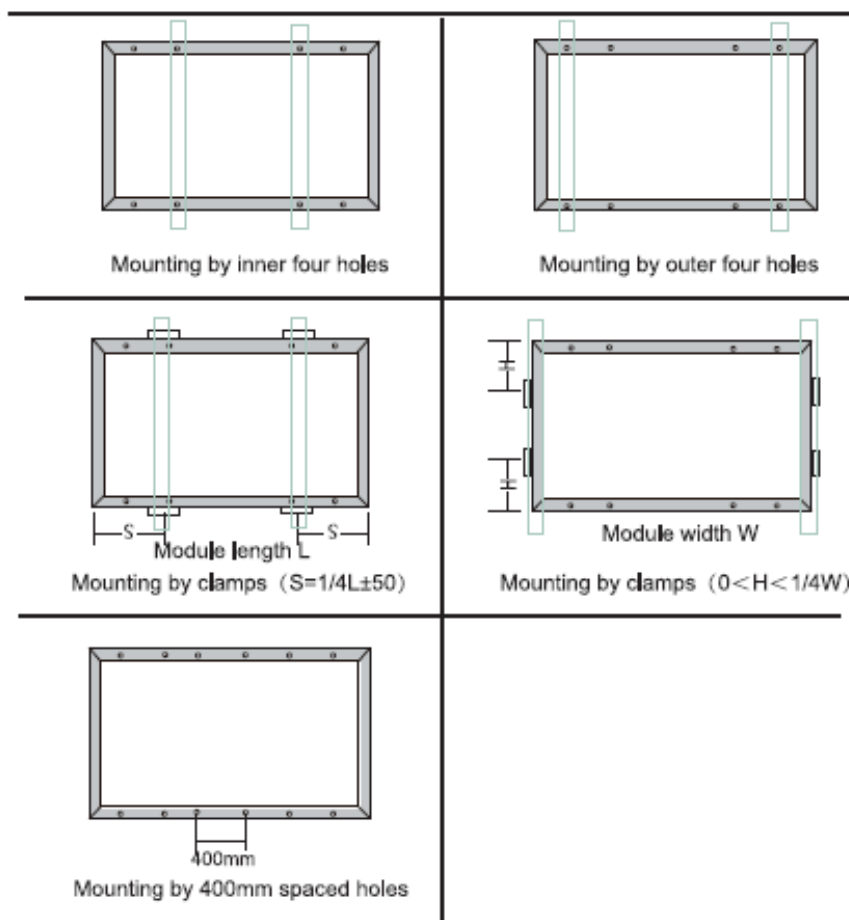

Installation methods		Inner four holes	Outer four holes	Mounting by clamps $S=1/4L\pm50$	Mounting by clamps on the short frame $H=1/4W\pm50$	Mounting by 400mm space holes*
Module types						
Single-glass modules	SP-BG-108-XXX**	+5400/-2400	N/A	+5400/-2400	±2000	N/A
	SP-BG-120-XXX**	+5400/-2400	N/A	+5400/-2400	±2000	N/A
	SP-BG-132-XXX**	+5400/-2400	N/A	+5400/-2400	±2000	N/A
	SP-BG-144-XXX**	+5400/-2400	N/A	+5400/-2400	±2000	N/A

"N/A" means not applicable; "--" means in verification

*For installation with 400mm mounting holes, please consult with tracker companies about the workable installation solution if required test load is less than 2400Pa.

** : XXX out power declared

6. Electrical Installation

1. Electrical Property

The rated electrical characteristics, I_{sc} is within $\pm 5\%$ and V_{oc} is within $\pm 3\%$ of measured values at Standard Test Conditions, but for the P_{max} , it is within $\pm 3\%$. Standard Test Conditions: 1000W/m^2 Irradiance, 25°C Cell Temperature and 1.5 Air Mass.

To facilitate proper system sizing in normal operation, the manufacturer shall describe factors that can increase voltage or current beyond the STC values given in the documentation. In relation to this, the following or equivalent statements shall be included:

11A photovoltaic module is likely to experience conditions that produce higher current and/or voltage than reported at standard test conditions. Factors to consider include module temperature and front side irradiance (and, for bifacial modules, ground or roof albedo, row spacing, and installation height). Accordingly, the values of V_{oc} and I_{sc} (or for bifacial modules, $I_{sc-assi}$) marked on this PV module should be multiplied by a factor of 1.25 when determining voltage and current ratings for components connected to the PV output.¹¹

The safety factor of 1.25 given for the minimum voltage rating of the components in the example statement above may be modified during the design of a system according to the minimum temperature of the location of the installation and the temperature coefficient for V_{oc} .

The safety factor of 1.25 given for conductor current ratings values for I_{sc} (or for bifacial modules, $I_{sc-assi}$) may be adjusted based on the maximum values of irradiance incident on the front side of the module (and the rear side for bifacial modules). To this purpose, a full simulation for the specific location and module orientation (and for bifacial modules, ground albedo, row spacing and installation height) is required. Further guidance for the choice of a safety factor other than 1.25 is given in IEC 62548.¹¹

The documentation shall state that artificially concentrated sunlight producing a PV module's current above the value reported on the nameplate shall not be directed onto the front side or the back side of the PV module.

Under normal conditions, the photovoltaic modules may experience conditions that produce more current and/or voltage than reported at Standard Test Conditions. Accordingly, the values of short circuit current, I_{sc} , and open circuit voltage, V_{oc} , marked on modules should be multiplied by a factor of 1.25 when determining component voltage ratings, conductor capacities, fusing sizes, and size of controls connected to the module output.

Voltages are additive when modules are connected directly in series, and modules currents are additive when modules are connect- ed directly in parallel, as illustrated in Figure 4.

Modules with different electrical characteristics must not be connected directly in series.

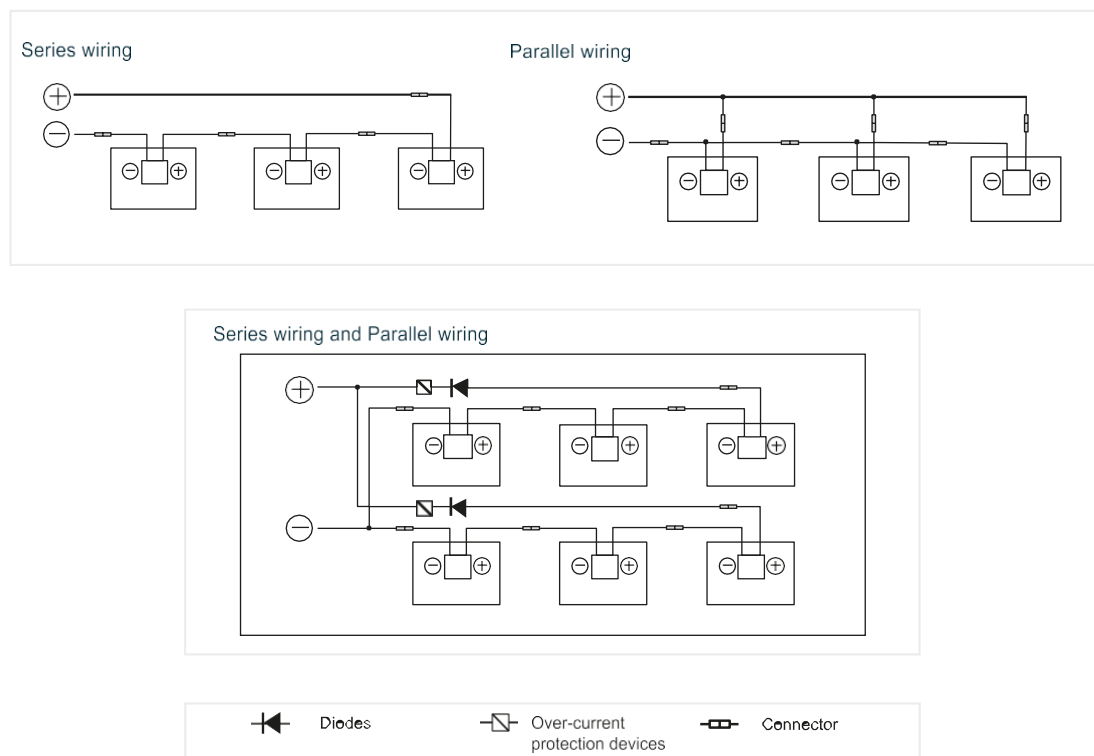


Figure 4: Electrical diagrams of series and parallel wiring

The maximum number of modules that can be connected in a series string must be calculated in accordance with applicable regulations in such a way that the specified maximum system voltage (The maximum system voltage of HSA Energy Modules is DC 1500V according to the safety appraisal of the IEC61730.) of the modules and all other electrical DC components will not be exceeded in open-circuit operation at the lowest temperature expected at the PV system location. Correction factor for the open-circuit voltage can be calculated based on the following formula: $C_{voc} = 1 - r_{3voc}(25 - T)$. T is the lowest expected ambient temperature at the system location. $r_{3voc}(\%/^{\circ}C)$ is the temperature coefficient of the selected module V_{oc} (refer to corresponding datasheet).

An appropriately rated over-current protection device must be used when the reverse current could exceed the value of the maximum fuse rating of the modules. An over-current protection device is required for each series string if more than two series strings are connected in parallel, in Figure 4 for bifacial modules, front side have been tested 1000 W/m² and rear side tested 300 W/m². Unless tested as a front side, the back side is restricted for use with indirect or limited direct sunlight (less than 300 W/m²). If both sides of a module are intended for use with prolonged exposure to direct sunlight (> 300 W/m²), each side shall meet requirements for front side.

2. Cables and Wiring

These junction boxes have been designed to be easily interconnected in series for their well-connected cable and the connector with IP67 (IP68) protection grade. Each Module has two single-conductor wires, one positive and one negative, which are pre-wired inside the junction box. The connectors at the opposite end of these wires allow easy series connection of adjacent Modules by firmly inserting the positive connector of a Module into the negative connector of an adjacent Module until the connector is fully seated.

Use field wiring with suitable cross-sectional areas that are approved for use at the maximum short-circuit current of the Modules. SP recommends installers use only sunlight resistant cables qualified for direct current (DC) wiring in PV systems. The minimum wire size should be 4mm²(12AWG).

Rating Required Minimum Field Wiring

Testing Standard	Wire size	Temperature Rating
EN50618:2014	4mm ²	-40°C to+90°C

Cables should be fixed to the mounting structure in such a way that mechanical damage of the cable and/or the Modules is avoided. Do not apply stress to the cables. The minimum cables bending radius should be 38.4mm. Any cable damage caused by bending too much or cable management system is not covered under SP's warranty. For fixing, use appropriate means, such as sunlight resistant cable ties and/or wire management clips specifically designed to attach to the Module frame. While the cables are sunlight resistant and waterproof, where possible, avoid direct sunlight exposure and water immersion of the cables.

Cable arrangement must comply with local laws and regulations.

3. Connectors

Keep connectors dry and clean, and ensure that connector caps are hand tight before connecting the Modules. Do not attempt making an electrical connection with wet soiled, or otherwise faulty connectors. Avoid sunlight exposure and water immersion of the connectors. Avoid connectors resting on the ground or roof surface.

Faulty connections can result in arcs and electrical shock. Check that all electrical connections are securely fastened. Make sure that all locking connectors are fully engaged and locked. Connector interconnect must reach the corresponding IP protection level, so as to achieve the electrical security. It is not recommended to interconnect different types of connectors.

Do not contact organic solvents and other corrosive materials in connector connection and the using environment, such as alcohol, gasoline, pesticides, herbicides, etc. Please consult SP for details. Otherwise, SP will not be responsible for connector cracking caused by this aspect. Two examples of incorrect usage are listed below:



Connector types and manufacturers must be matched such as Model: QC 4.10
Manufacturer: QC Solar (Suzhou) Corporation
or
Model: MC4
Manufacturer: Staubli

Please, pay attention that the unlock method of connectors is different according to local laws and regulations. During the construction of the power plant, the connector shall not be exposed to the outdoor environment under unconnected state for a long time, so as to prevent the dust in the environment from the connector, resulting in the reliability decline of connector connection

4. Bypass Diodes

The junction boxes used with SP Modules contain bypass diodes wired in parallel with the PV cell strings. In the case of partial shading, the diodes bypass the current generated by the non-shaded cells, thereby limiting Modules heating and performance losses. Bypass diodes are not over-current protection devices.

In the event of a known or suspected diode failure, installers or maintenance providers should contact SP. Never attempt to open the junction box by yourself.

Please ,pay attention to guard against inductive lightning, backflow and wrong connection.

7. Grounding

SP Modules use an anodic oxidized aluminum frame to resist corrosion. So, the frame of Modules should be connected to the equipment grounding conductor to prevent thunder and electrical shock.

The grounding device should fully contact with the inside of the aluminum alloy, and penetrate the surface of the frame oxidation film.

Please don't drill any additional grounding hole on the frame of the Modules, otherwise SP expressly disclaim liability for voiding the warranty.

To acquire the best power output, SP recommends clients to install modules with anti-PID inverter.

The grounding method should not result in the direct contact of dissimilar metals with the aluminum frame of the Modules that will result in galvanic corrosion. IEC 60950-1 standard recommends metal combinations not exceed an electrochemical potential difference of 0.6 Volts.

The frame rails have pre-drilled holes marked with a grounding sign. These holes should be used for grounding purposes and should not be used for mounting the Modules.

The following grounding methods are available.

1. Grounding by using grounding bolt

There is a grounding hole with 4.2 mm diameter on the edge side closer to the middle of the back frame of the Modules. The middle line of the grounding mark is overlapped with the grounding hole, and the direction is same as the longer frame.

The grounding between Modules must be approved by a qualified electrician. The grounding device should produce by a qualified electrical manufacturer. The recommended torque value is 2.3 N.m. A 12 AWG copper wire can be used as the equipment grounding conductor in conjunction with the grounding bolt. The copper wire should not be compressed during the installation.

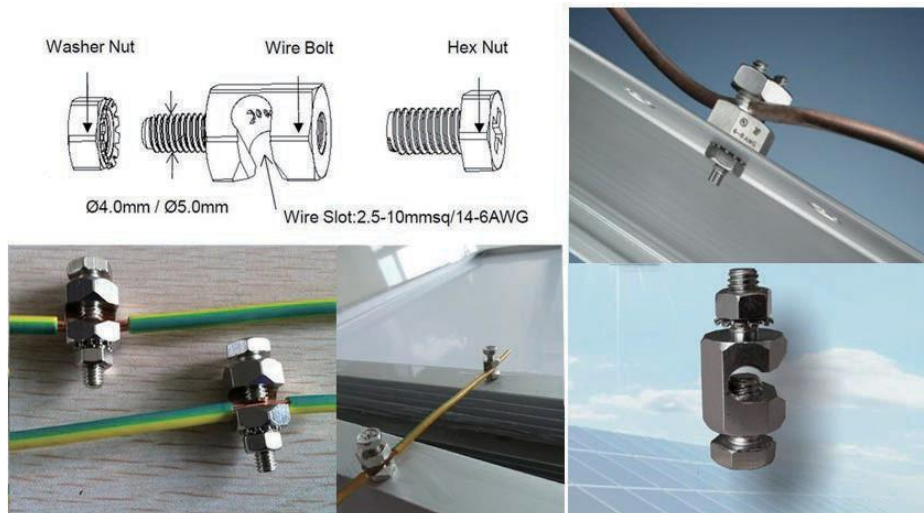


Figure6:installation Methods

2. Grounding by unused mounting hole


The existing mounting holes which have not been used can be used for grounding.

A. Direct the grounding clamp to the mounting holes in the frame. Thread the grounding clamp and the frame with grounding bolt.

B. Put the toothed gasket into the other side, then tighten and lock the nut. The recommended torque of locking the nut is $2.0 \text{ N}\cdot\text{M}$ - $2.2 \text{ N}\cdot\text{M}$.

C. Thread the grounding clamp with grounding wire. The material and size of grounding wire should meet the relevant requirements of the national, regional and local code, law and standard.

D. Finish the mounting with tightening the binding bolt of grounding wire.

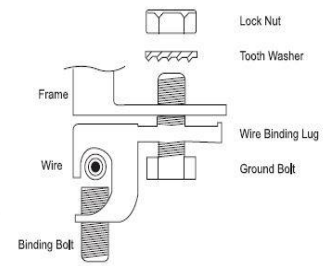

3. Additional Third-party Grounding Devices

SP Modules can be grounded using third party grounding devices so long as they are certified for grounding modules and the devices are installed according to the manufacturer's specified instructions.

8. Operation and Maintenance

It is required to perform regular inspection and maintenance of the Modules, especially within warranty scope. It is the user's responsibility to report to the supplier regarding the damages found within 2 weeks.

1. Cleaning

The dust accumulated on the front transparent substrate may reduce the power output, and may even cause regional hot-spot effect. Industrial effluents or bird drops may be a serious case, and the extent of the severity depends on the transparency of the foreign objects. It's usually not dangerous for the accumulated dust to reduce the sunshine, because the light intensity is still homogeneous and the power reduction usually is not obvious.

When Modules are operational, there may exist environmental factors that cast dust, plants and so on, that may distinctly reduce the power output. SP advises that there should be no obstructed object over the Modules surface at anytime.

The cleaning frequency depends on the accumulating velocity of the fouling. In many instances the front substrate is cleaned with the rain, and we can decrease the cleaning frequency. It is recommended to wipe the glass surface with wet sponge or soft cloth. Please do not clean the glass with cleaning agent which contains acid or alkali.

Please refer to "cleaning manual" for specific contents.

2. The visual inspection of the Modules

Inspect the Modules visually to find if there are appearance defect, the following three types need more attention specially:

- A. Whether the glass is broken;
- B. Corrosion along the cells' bus-bar. The corrosion is caused by the dampness infiltrated into the Modules when the surface encapsulation material is damaged during the installation or transportation.
- C. If there is burning vestige on the backsheet

3. Inspection of the connector and the cable

It's recommended to implement the following preventive maintenance every 6 months:

- 1 Check the encapsulation of the connector with the cable.
- 2 Check the sealing gel of the junction box to ensure it is not cracked or creviced.

PRODUCT SUPPLEMENT

The installation manual applicable module types are as follows. The module types are subject to changes without prior notice due to continuous product innovation, research and development.
"XXX" shows the PEAK power of the Module Label in increments of 5.

Module Type	Dimensions
SP-BG-108-XXX	1723*1134*35
SP-BG-120-XXX	1908*1134*35
SP-BG-132-XXX	2094*1134*35
SP-BG-144-XXX	2278*1134*35

Model Family & Electrical Ratings Form

Model family series (example below provided for reference)

Model Name	Rated Power [Wp]	Dimensions [length x width x height]	Number of cells in module	Number of cell per bypass diode
SP-BG-144-540W	540	2278*1134*35	144	48
SP-BG-144-545W	545	2278*1134*35	144	48
SP-BG-144-550W	550	2278*1134*35	144	48
SP-BG-144-555W	555	2278*1134*35	144	48
SP-BG-144-560W	560	2278*1134*35	144	48
SP-BG-132-495W	495	2094*1134*35	132	44
SP-BG-132-500W	500	2094*1134*35	132	44
SP-BG-132-505W	505	2094*1134*35	132	44
SP-BG-132-510W	510	2094*1134*35	132	44
SP-BG-120-450W	450	1908*1134*35	120	40
SP-BG-120-455W	455	1908*1134*35	120	40
SP-BG-120-460W	460	1908*1134*35	120	40
SP-BG-120-465W	465	1908*1134*35	120	40
SP-BG-108-405W	405	1723*1134*35	108	36
SP-BG-108-410W	410	1723*1134*35	108	36
SP-BG-108-415W	415	1723*1134*35	108	36
SP-BG-108-420W	420	1723*1134*35	108	36

Electrical rating (example below provided for reference)

	Module type	SP-BG-144-540	SP-BG-144-545	SP-BG-144-550	SP-BG-144-555	SP-BG-144-560
STC condition	Pmp [W] /Tolerance	540	545	550	555	560
	Voc [V] /Tolerance	49.70	49.85	50.0	50.15	50.29
	Isc [Adc] /Tolerance	13.80	13.87	13.94	14.04	14.12
	Vmp [V]	41.48	41.64	41.80	41.94	42.12
	Imax [Adc]	13.01	13.08	13.15	13.23	13,29
BNPI condition	Pmp [W] /Tolerance	± 3%	± 3%	± 3%	± 3%	± 3%
	Voc [V] /Tolerance	± 3%	± 3%	± 3%	± 3%	± 3%
	Isc [Adc] /Tolerance	± 3%	± 3%	± 3%	± 3%	± 3%
bifaciality coefficient	φPmax	n/a	n/a	n/a	n/a	n/a
	φVoc	n/a	n/a	n/a	n/a	n/a
	φIsc	n/a	n/a	n/a	n/a	n/a
	Maximum system voltage [V]	1500	1500	1500	1500	1500
	Maximum Over-Current Protection Rating [A]	25	25	25	25	25

	Module type	SP-BG-132-495	SP-BG-132-500	SP-BG-132-505	SP-BG-132-510
STC condition	Pmp [W] /Tolerance	495	500	505	510
	Voc [V] /Tolerance	45.66	45.80	45.95	46.10
	Isc [Adc] /Tolerance	13.77	13.84	13.91	13.99
	Vmp [V]	38.24	38.40	38.56	38.72
	Imax [Adc]	12.96	13.03	13.11	13.19
BNPI condition	Pmp [W] /Tolerance	± 3%	± 3%	± 3%	± 3%
	Voc [V] /Tolerance	± 3%	± 3%	± 3%	± 3%
	Isc [Adc] /Tolerance	± 3%	± 3%	± 3%	± 3%
bifaciality coefficient	φPmax	n/a	n/a	n/a	n/a
	φVoc	n/a	n/a	n/a	n/a
	φIsc	n/a	n/a	n/a	n/a
	Maximum system voltage [V]	1500	1500	1500	1500
	Maximum Over-Current Protection Rating [A]	25	25	25	25

	Module type	SP-BG-120-450	SP-BG-120-455	SP-BG-120-460	SP-BG-120-465
STC condition	Pmp [W] /Tolerance	450	455	460	465
	Voc [V] /Tolerance	41.40	41.51	41.65	41.78
	Isc [Adc] /Tolerance	13.80	13.87	13.95	14.08
	Vmp [V]	34.60	34.73	34.87	34.99
	I _{max} [Adc]	13.01	13.08	13.28	13.35
BNPI condition	Pmp [W] /Tolerance	± 3%	± 3%	± 3%	± 3%
	Voc [V] /Tolerance	± 3%	± 3%	± 3%	± 3%
	Isc [Adc] /Tolerance	± 3%	± 3%	± 3%	± 3%
bifaciality coefficient	φP _{max}	n/a	n/a	n/a	n/a
	φV _{oc}	n/a	n/a	n/a	n/a
	φI _{sc}	n/a	n/a	n/a	n/a
	Maximum system voltage [V]	1500	1500	1500	1500
	Maximum Over-Current Protection Rating [A]	25	25	25	25

	Module type	SP-BG-108-405	SP-BG-108-410	SP-BG-108-415	SP-BG-108-420
STC condition	Pmp [W] /Tolerance	405	410	415	420
	Voc [V] /Tolerance	37.69	37.80	37.92	38.05
	Isc [Adc] /Tolerance	13.81	13.88	13.96	14.02
	Vmp [V]	31.49	31.62	31.75	31.91
	I _{max} [Adc]	12.98	13.09	13.27	13.32
BNPI condition	Pmp [W] /Tolerance	± 3%	± 3%	± 3%	± 3%
	Voc [V] /Tolerance	± 3%	± 3%	± 3%	± 3%
	Isc [Adc] /Tolerance	± 3%	± 3%	± 3%	± 3%
bifaciality coefficient	φP _{max}	n/a	n/a	n/a	n/a
	φV _{oc}	n/a	n/a	n/a	n/a
	φI _{sc}	n/a	n/a	n/a	n/a
	Maximum system voltage [V]	1500	1500	1500	1500
	Maximum Over-Current Protection Rating [A]	25	25	25	25